

# Discharging Instructions Manual R-Flex Easy Flexitank


Rev12-231011





#### **Positioning the Container**

Ensure that the front of the container is in a higher position compared to the back/door side, so that it will have the necessary slope to facilitate the discharge. Interval of 15cm is sufficient.

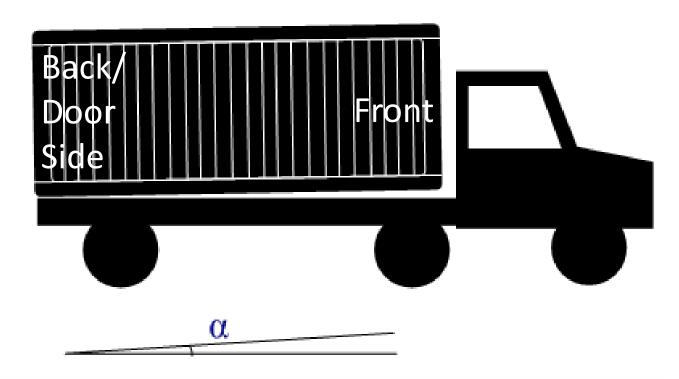



### Coupling





Our standard valve is 3" male camlock.

You will need to have a 3 " female cam-lock coupling. (DIN EN 14 420–7) Upon request 2" reductor is available.

## Coupling











- 1. Remove the dust cap.
- 2. Couple the hose.
- 3. Compress the latch.
- 4. Rotate the arm.
- 5. Unroll the bonnet.




### Discharging

- Start discharging the R-Flex.
- Do not suspend the hose.
- Use a pump to decant the flexitank.
- WARNING: We recommend the discharging speed to be set to approximately 300Lt per minute level at the very last 3-4,000Lt. Strong pumps may suck the inner layers of our flexitank which may cause a blockage at the valve. Reducing the speed avoids problems as such.




#### Supporting the Hose

 Support the hose from the right point. Ensure that the hose is NOT put under any stress at any point in time during the entire discharging period.

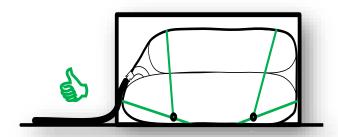

 Hose support must be done very carefully. Support shall not create any torsion/stress over the valve.

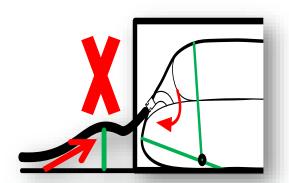



#### EFFICIENT SMART SAFE







## Supporting the Filling Hose

Our valve is not static and goes down during discharging. Therefore, if the filling hose is supported with a tripod or similar, ensure that the support point is being changed periodically during the entire discharge.






If no hose support is being used, ensure that the hose does not exert any pressure to the valve. Ideal standing is shown at the picture.

## Supporting the Filling Hose

 Ensure that the hose is not too short and not too stiff. Prevent the hose from pulling out the flexitank towards the doors.



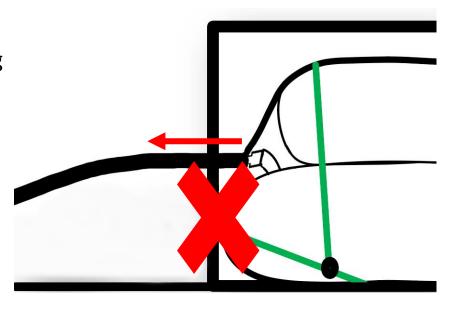



## | Flexitank Lashing Straps

When the discharging is completed, untie/cut the lashing straps (both at the door and trhe front side of the container.



A003/A0L3/A0P3/AVP3



## Discharging

After pumping all the product out, pull both sides of the R-Flex to the center.







## Discharging

Roll-up the E-flex starting from the front/nose side of the container, pushing the liquid towards the valve.





## Discharging

The E-Flex should be empty and ready for recycling at this point.







#### THANK YOU

UguA Europe
Calle Jose Aguirre 40, Pius 31 Viennos España
CP: 46011
+34-91 1238506
UguA Fabrika
Ataboy Cd. No 28 Kat 1 Çekmekby 34794 İstanbul
Türkiye
+90 216 312 8660

www.liquatrans.com

I info@liquatrans.com